



IT'S NOT A WINDOW...IT'S
Magnetite
www.magnetite.com



How to Install Your Magnetite Windows


Thanks for choosing Magnetite as the sound control and thermal efficiency solution for your windows. While your install may be different, these instructions will cover how to do a general DIY install of Magnetite window panels in your home or business.





Step 1:


- Verify your window measurements.
- Be sure to measure both the width and the height of your window

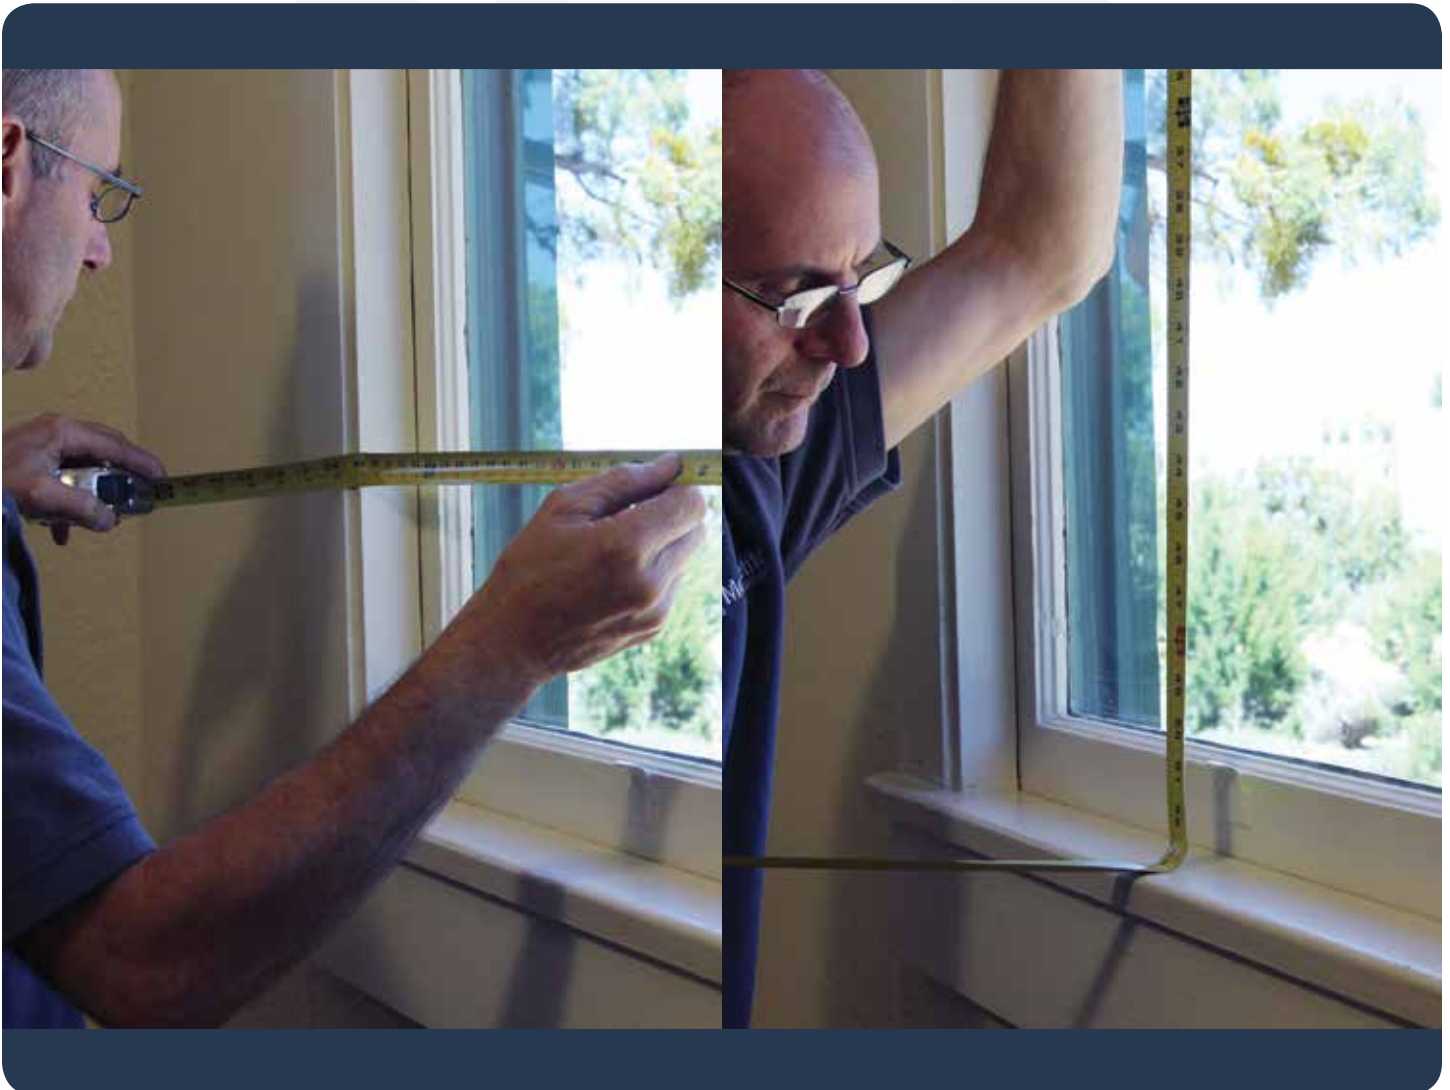



Step 2:


- Find the "L" frame for the base width of your window

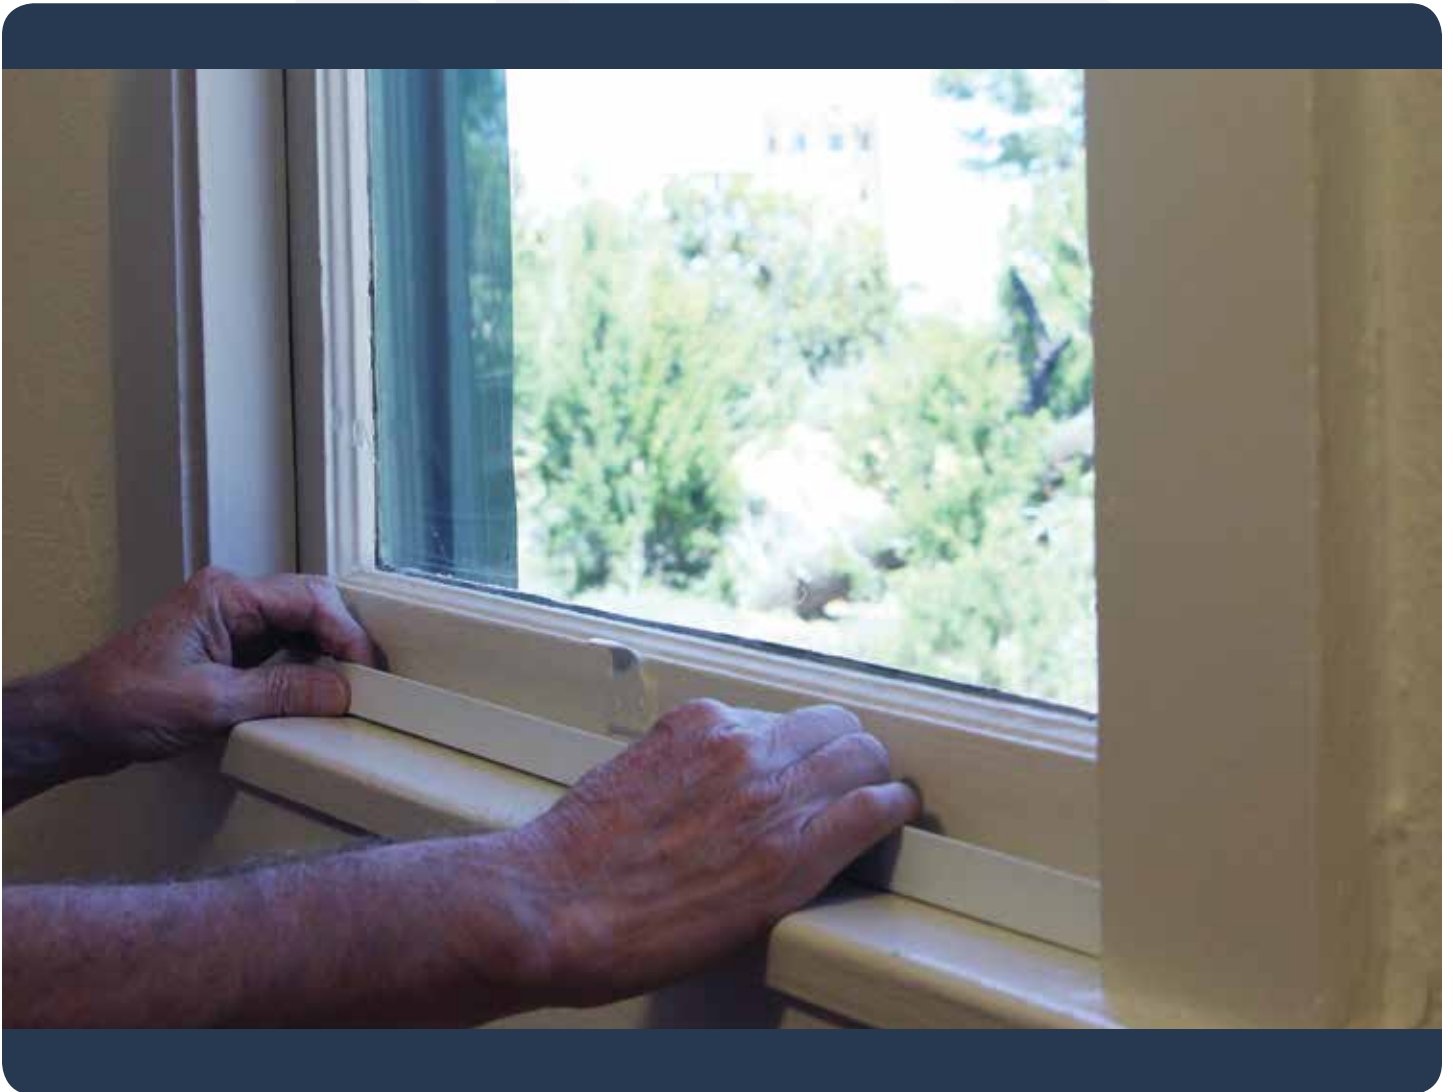



Step 3:

- Verify that the "L" frame fits.
- Trim if necessary.
- Dry fit the framework first to make sure that there is nothing in the way like handles, latches, or window cranks.

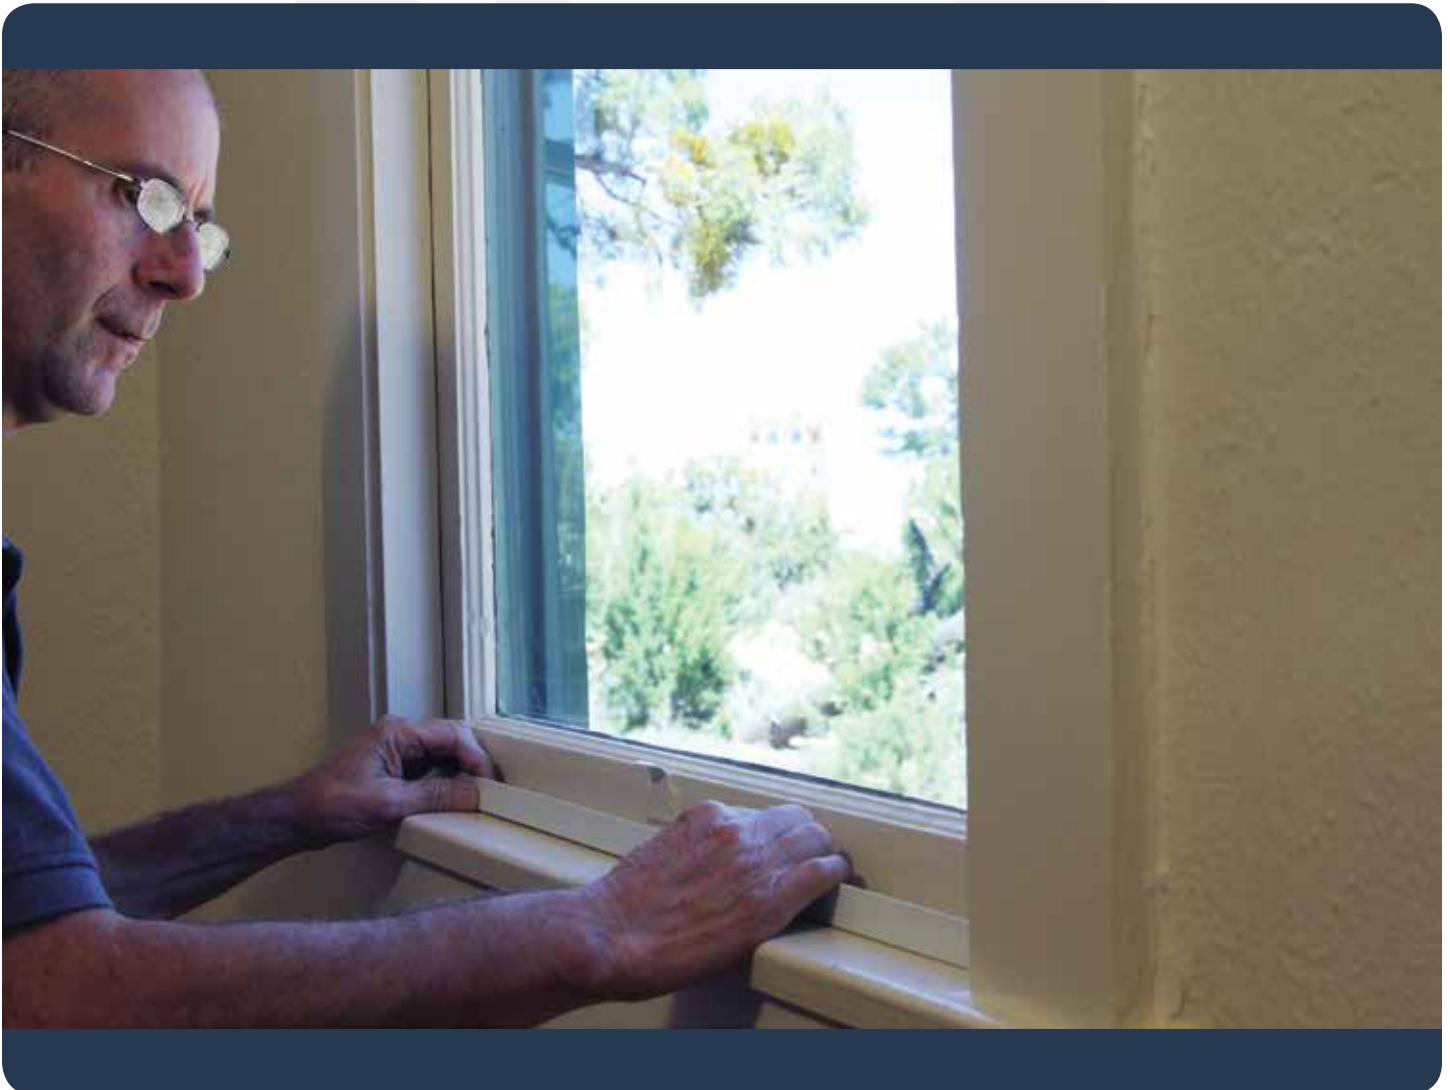



Step 4:

- Attach the "L" frame inside of the window box using the included screws.





Step 5:


- Repeat steps 3 and 4 for the top and then right and left frame pieces.





Step 6:

- Caulk around the perimeter of the framing and let dry for 30 minutes.

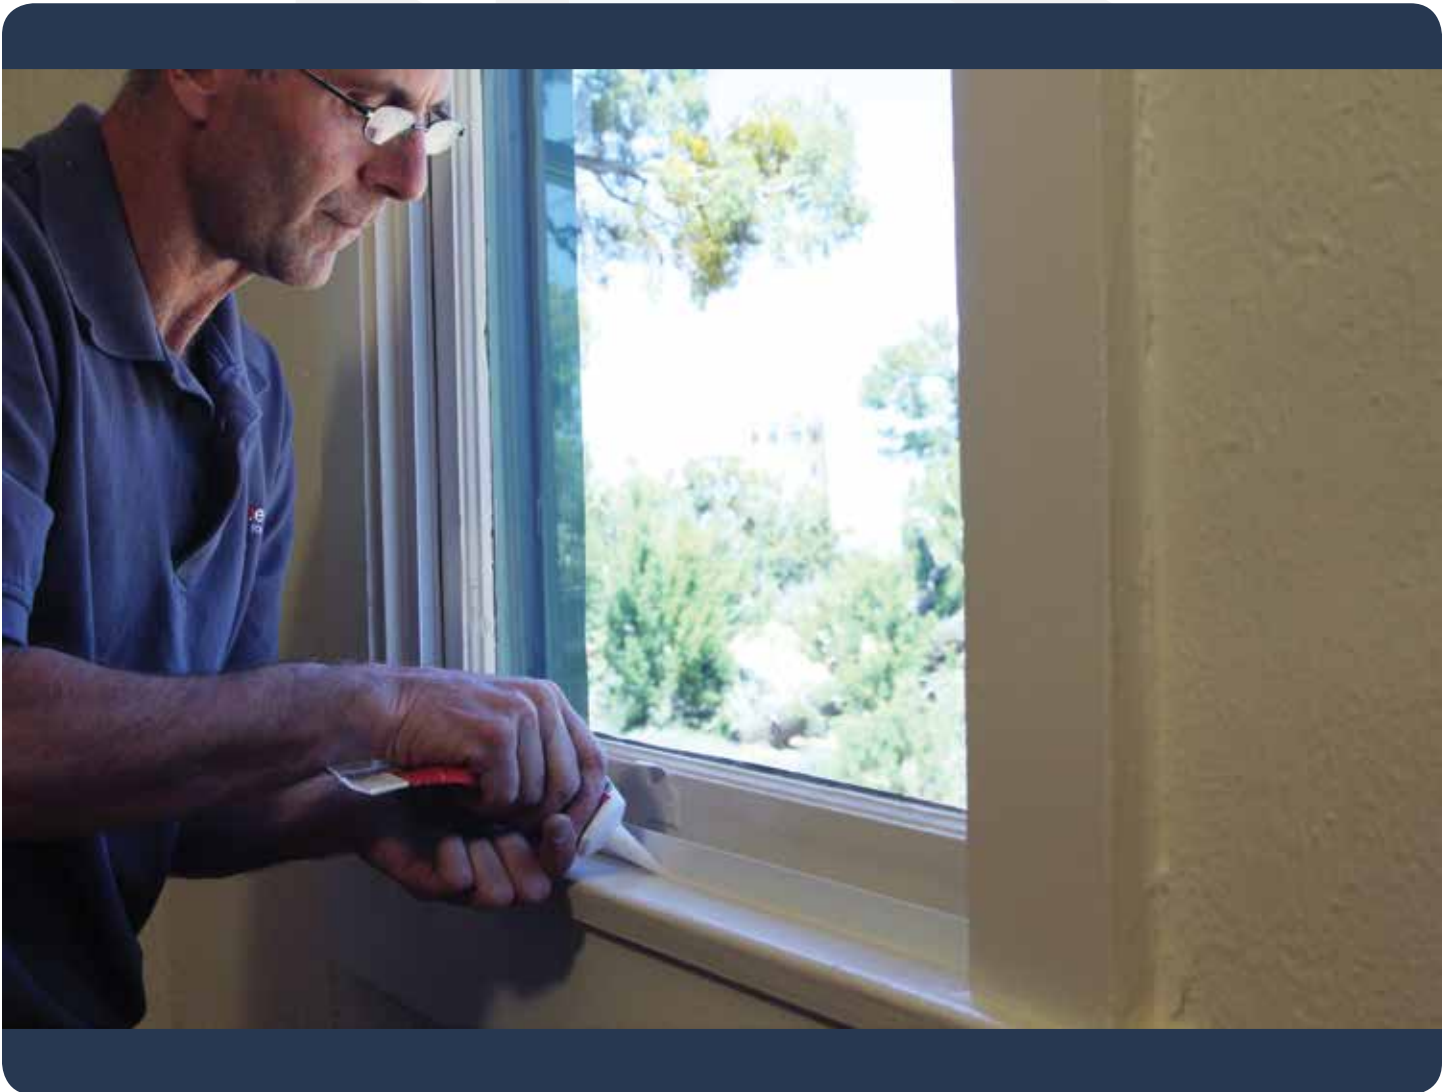



IT'S NOT A WINDOW...IT'S
Magnetite
www.magnetite.com



Step 7:

- Install your pre-built Magnetite window panel.
- Start from the bottom and work your way to the top.
- The panel should “click” into place as the magnet attaches to the frame.





IT'S NOT A WINDOW...IT'S

Magnetite

www.magnetite.com



Finished:

- Your Magnetite window panel is now installed.
- Repeat the steps above for each additional panel that you would like installed.





Additional Steps:

- Intall any existing or new window treatments as desired.





IT'S NOT A WINDOW...IT'S

Magnetite

www.magnetite.com